



 
Maintaining the Aerophone Brisa

After playing, follow the steps below to clean the instrument.

1. Turn off the power.

2. Air out the inside of the head joint.


Use the included blower to blow air into the head joint from the direction of the arrows in the illustration. Let out the moist air that is accumulated in the head joint to air it out.



3. Wipe the instrument clean.

Use a cleaning cloth to wipe off areas that are prone to fingerprints and smudges, such as the performance keys.

If the lip plate gets dirty, wipe it off.

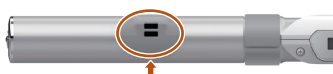

* The lip plate cannot be removed from the instrument.

4. Store the instrument in the carrying case.

Store the instrument in the carrying case without pressing the performance keys.



The desiccant is located as shown in the illustration. Dry the desiccant in the sun or otherwise from time to time to regenerate it. Replace the desiccant with a commercially available product around once every six months, depending on usage conditions.

MEMO

If the moisture band gets dirty, detach and wash it.

Important notes on the lithium-ion battery

When you connect the USB cable and charge the lithium-ion battery, the charging indicator lights up as follows:

Orange: Charging

Green: Charging completed

NOTE

In the following cases, there may be a malfunction of the lithium-ion battery. Stop using your instrument, disconnect the USB cable, and contact Roland Support or the dealer where you purchased your instrument.

- When the USB cable is connected, the charging indicator lights up red.
- When the USB cable is connected, the charging indicator lights up green, but the power does not turn on when the USB cable is disconnected.
- When the USB cable is connected, the charging indicator blinks green, and even after reconnecting the USB cable and attempting to charge again, it continues to blink green.
- When the power is turned on, "Battery Error" is shown on the display.