

Aerophone Brisa Plus

Owner's Manual



Contents

Getting ready to use Aerophone Brisa Plus

[Connecting to the Aerophone Brisa](#)

If the connection fails

Aerophone Brisa Plus: Overview

Using the favorites

[Using the Favorite screen](#)

[Using the tone list screen](#)

[Registering tones as favorites](#)

How to use the fingering

[Using the Fingering screen](#)

How to use the settings

[Using the Setting screen](#)

[Setting the parameter values](#)

How to use Information

[Using the Information screen](#)

[Making a backup](#)

[Restoring a backup](#)

Getting ready to use Aeropphone Brisa Plus

Connect the “Aeropphone Brisa Plus” app that you installed on your mobile device with the Aeropphone Brisa via Bluetooth®.

* If you are connecting a device via Bluetooth that uses Android 6.0 or later, you need to activate location data on the Android device.

Connecting to the Aeropphone Brisa

1. Turn on the Aeropphone Brisa.

The power indicator (orange) lights up.

MEMO


If you have more than one Aeropphone Brisa, turn on only the unit that you want to connect (turn off all others).

2. Set the Bluetooth setting of the Aeropphone Brisa to “On”.

The Bluetooth setting of the Aeropphone Brisa is set to “Off” and the Bluetooth indicator (blue) is off when using the factory settings.

Follow the steps below to set the Bluetooth setting to “On”.


1. Press the [MENU] button.
2. Use the [◀] [▶] buttons to select “Bluetooth”.

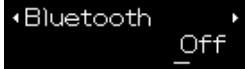

If “Off” is shown, press the [MENU] button and then press the [▶] button to select “On”.

3. Place the Aeropphone Brisa close to the mobile device that you want to connect.

4. Turn on the Bluetooth function of the mobile device.

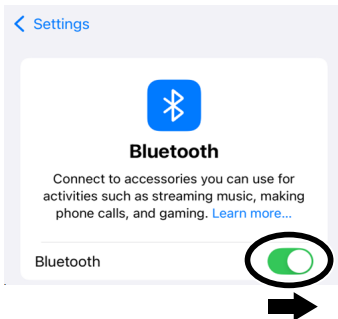

* The display depends on the device you're using.

NOTE

Do not tap the "AE-BRISA" text shown in the Bluetooth settings screen of the mobile device. If you've tapped it, tap the "i" located beside "AE-BRISA connected" in the mobile device's screen, tap "Forget This Device" and start again from step 1.

5. Launch Aerophone Brisa Plus.

6. Select "Connect Aerophone Brisa".

The scan starts automatically.


NOTE

If you're using an Android device, the message "Allow Aerophone Brisa Plus to access this device's locations?" may be shown when you first launch the app. Select "Allow" so that you can use the Bluetooth functionality in this app.

Getting ready to use Aerophone Brisa Plus


[Contents](#)

- * If the scan is not successful, tap the "Scan" button on the screen.

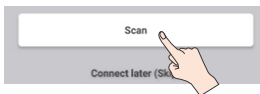


- * If more than one Aerophone Brisa is detected that can be connected, a selection screen appears.

7. If you see a pairing confirmation message, tap "Pair".

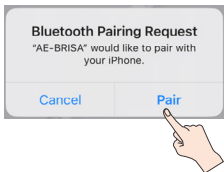

- * The display depends on the device you're using.


8. Once you see the message "Connected to AE-BRISA", tap the [OK] button.

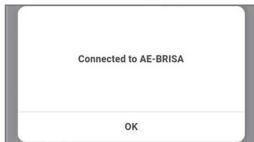

If the connection fails

If the connection fails, such as AE-BRISA not appearing after scanning, or not connecting when you tap the AE-BRISA you want to connect, try the following steps.

1. From the Settings app on your mobile device, open the Bluetooth settings and tap “i” when AE-BRISA appears to delete the pairing information.

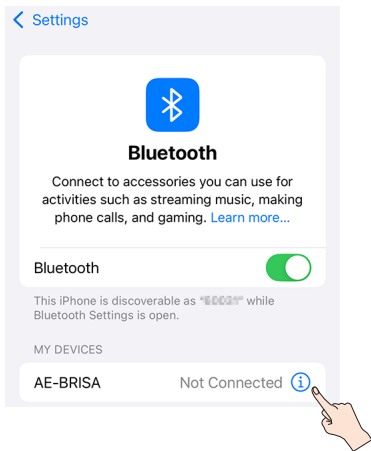


* The display depends on the device you're using.

2. Initialize Bluetooth on the Aerophone Brisa.

1. Press the [MENU] button.
2. Use the [◀] [▶] buttons to select "Pro Menu", and then press the [MENU] button.
3. Use the [◀] [▶] buttons to select "Initialize", and then press the [MENU] button.
4. Use the [◀] [▶] buttons to select "Bluetooth", and then press the [MENU] button.
5. Press the [▶] button to initialize.
6. Turn the power of the Aerophone Brisa off and then on again.

3. Tap "Scan" on the Aerophone Brisa Plus screen.

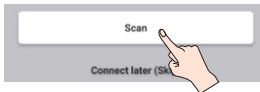


4. Continue from step 7 of "Connecting to the Aerophone Brisa".

Aerophone Brisa Plus: Overview

This app lets you check the status of the Aerophone Brisa itself as well as the status of connections to the Aerophone Brisa.

Shows the transpose value of the connected Aerophone Brisa.

Lets you check the status of connection to the Aerophone Brisa.

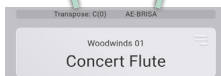

The Aerophone Brisa Plus has the following functions.

Use the buttons at the bottom of the screen to switch between the functions.

Favorite

Lets you confirm/switch between the currently selected tone and register/ switch between favorite tones.

 
➔ ["Using the favorites"](#)

Information

You can also refer to the version information and Owner's Manual.

You can also back up the settings of the Aerophone Brisa.

➔ ["How to use Information"](#)



Fingering

When you press a performance key on the Aerophone Brisa, the corresponding part lights up onscreen, letting you check which pitch you played.

You can also refer to the Fingering Chart (PDF).

➔ ["How to use the fingering"](#)

Setting

Lets you edit the settings of the Aerophone Brisa.

➔ ["How to use the settings"](#)

Using the favorites


Using the Favorite screen

The currently selected tone is shown.

Tap to show the tone list.

You can switch to any tone from the tone list.

→ "Using the tone list screen"

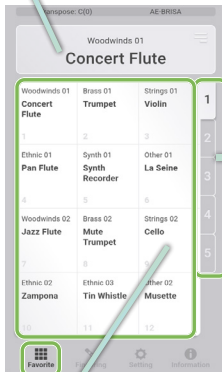

Click on the numbers 1–5 to switch between favorite banks.

The tones that you've registered as favorites are shown here.
Press and hold a tone button to register the tone as a favorite.


You can also tap a tone button to switch to that tone.

→ "Registering tones as favorites"

Strings 02
Cello

Using the tone list screen


Tap here to toggle between preset and user tones.

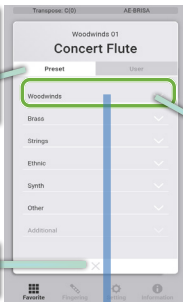

The tones are listed by category.

Tap a category to view the tones in that category.

Closes the tone list.

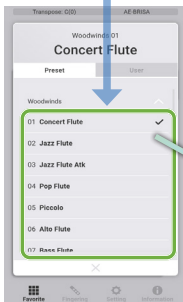


You can also tap a tone name to switch to that tone.

Registering tones as favorites

Follow the steps below to register a tone as a favorite.

1. Long-press where you want to register (save) the favorite.

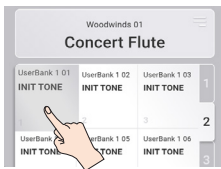


2. When the tone list appears, select the tone you want to register and tap the [OK] button.




Using the favorites

Contents

3. Tap the [OK] button.

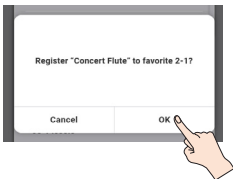


4. The selected tone is registered as a favorite, and the display returns to the Favorite screen.

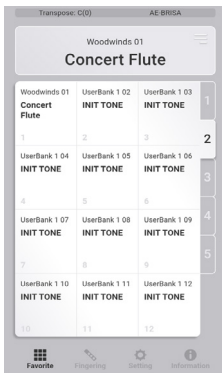

How to use the fingering

Using the Fingering screen

When a performance key on the Aerophone Brisa is pressed, it lights up red onscreen.

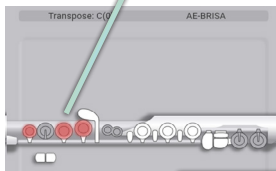

Shows the current fingering mode. Tap to change the fingering mode.

Fingering Mode
Brisa

Fingering Chart

The note that plays as a result of the current fingering mode and key you played is shown.

G4



Favorite

Fingering

Setting

Information

Tap to show the Fingering Chart.

How to use the settings


Using the Setting screen

Common

This tab lets you configure the parameters for the operations and performance of the Aerophone Brisa.

MIDI Assign

Sets the MIDI message assigned to the controller, such as the breath sensor.

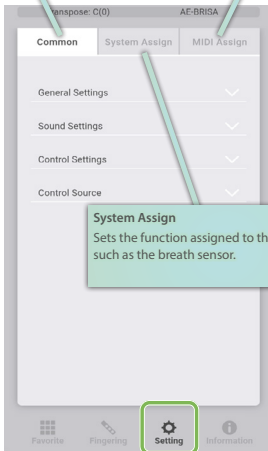


Setting the parameter values

Follow the steps below to set the parameter values.


1. Tap the category of the parameter you want to change to expand it.

MEMO


For more on the parameter categories, refer to the "Reference Manual" (Roland website).

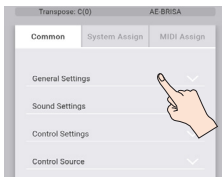

2. Tap the parameter you want to change.

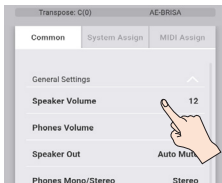

3. Tap the value.

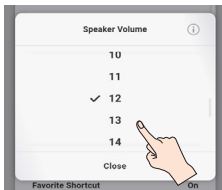

MEMO

Tap the ⓘ button to show an explanation of the parameter.



How to use Information

Using the Information screen




Item	Explanation
Version	Shows the version of the Aerophone Brisa and of the app.
License	Shows the license text.
Backup	Backs up the settings of this instrument (P.18). You can also restore previously backed-up settings (P.20).
Connection	Shows a screen with the connection to the Aerophone Brisa. You can connect and disconnect the Aerophone Brisa here.
App Manual	Shows the app's manual.
Product Quick Start Manual	Shows the Quick Start manual for the Aerophone Brisa.
Product Reference Manual	Shows the Reference Manual for the Aerophone Brisa.
Product Information	Shows the Aerophone Brisa's product page on the Roland website.

Making a backup


Here's how to save the settings on the Aerophone Brisa to another device or to cloud storage.

1. Tap "Backup".

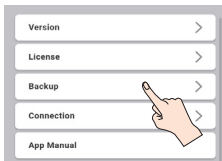


2. Tap the item you want to back up.

For more on the items you can back up, refer to the Reference Manual (Roland website).

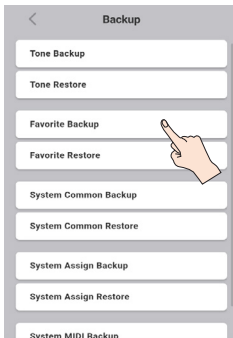

3. Select the backup destination.

Device	Saves to your device.
Cloud	Saves to cloud storage or a similar location.

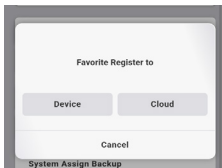


4. Follow the onscreen prompts to choose a location for saving, and enter a filename.

This backs up the settings.

Restoring a backup


Here's how to restore previously backed-up settings to the Aerophone Brisa.

1. Tap "Backup".

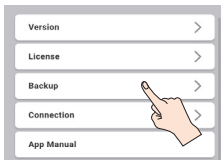


2. Tap the item you want to restore.

For more on the items you can restore, refer to the Reference Manual (Roland website).

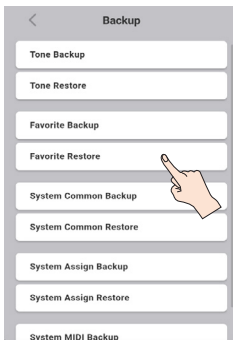

3. Choose the location where the file you want to restore is saved.

Device	Restores from a backup file saved on the device.
Cloud	Restores from a backup file saved in cloud storage or a similar location.

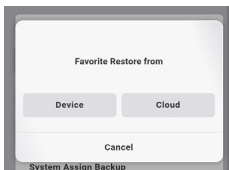**4. Follow the onscreen instructions to select the backup file.**

This restores the backup settings.