



Aerophone Brisa Tone List / トーン・リスト

01: Woodwinds

No	Tone Name
01	Concert Flute
02	Jazz Flute
03	Jazz Flute Atk
04	Pop Flute
05	Piccolo
06	Alto Flute
07	Bass Flute
08	Soprano Recorder
09	Alto Recorder
10	Ocarina
11	Alto Sax
12	Tenor Sax
13	Soprano Sax
14	Baritone Sax
15	Clarinet
16	Oboe
17	English Horn
18	Bassoon
19	Harmonica 1
20	Harmonica 2
21	Whistle

02: Brass

No	Tone Name
01	Trumpet
02	Mute Trumpet
03	Cornet
04	Trombone
05	French Horn
06	Tuba
07	Brass Section

03: Strings

No	Tone Name
01	Violin
02	Cello
03	Contrabass
04	Contrabass Pizz
05	Strings

04: Ethnic

No	Tone Name
01	Pan Flute
02	Zampona
03	Tin Whistle
04	Ryuteki
05	Shinobue
06	Shakuhachi 1
07	Shakuhachi 2
08	Bansuri
09	Shehnai
10	Pungi
11	Uilleann Pipes
12	Bag Pipes
13	Duduk 1
14	Duduk 2
15	Qudi
16	Bangdi
17	Bawu
18	Xiao
19	Xun
20	Guanzi
21	Suona
22	Hulusi
23	Sheng
24	Erhu
25	Matouqin

05: Synth

No	Tone Name
01	Synth Recorder
02	Lyrical SoftLead
03	Simple Sqr Lead
04	Simple Tri Lead
05	Tri Atk Lead
06	Sqr Fl Lead
07	Wide Syn Flute
08	Lyrical Sqr Lead
09	Warm Saw Lead
10	Lyrical SawLead1
11	Lyrical SawLead2

05: Synth

No	Tone Name
12	Lyrical SawLead3
13	Bright Saw Lead
14	SawSqr Reso Lead
15	Dist Saw Lead
16	Voice Lead
17	Porta Sqr Lead
18	Pulse Lead
19	Tri Sqr Lead
20	Saw Tp Lead
21	Syn MtTp Lead

06: Other

No	Tone Name
01	La Seine
02	Musette
03	Jazz Organ
04	Rock Organ
05	Church Organ
06	Jazz Scat 1
07	Jazz Scat 2
08	Choir
09	Timpani
10	Steel Drums
11	Vibraphone
12	Marimba
13	Xylophone
14	Glockenspiel
15	Glocken Pad
16	Drum Kit 1
17	Drum Kit 2
18	Latin Perc Set
19	SFX 1
20	SFX 2
21	Didgeridoo

Effect Type

01	Reverb Hall 1
02	Reverb Hall 2
03	Reverb Hall 3
04	Reverb Hall 4
05	Reverb Room 1
06	Reverb Room 2
07	Reverb Plate 1
08	Reverb Plate 2
09	Reverb Plate 3
10	Delay 1
11	Delay 2
12	Delay 3
13	Delay 4
14	Delay 5
15	Delay 6
16	Delay 7
17	Chorus

Tone list (detailed) / トーン・リスト (詳細)

01: Woodwinds

No	MSB	LSB	PC	Tone Name	Transpose	Octave	S1	S2	Thumb	Motion Tilt	Motion Roll	Effect Type	Effect Level
01	85	64	1	Concert Flute	C(0)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	54
02	85	64	2	Jazz Flute	C(0)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	54
03	85	64	3	Jazz Flute Atk	C(0)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	54
04	85	64	4	Pop Flute	C(0)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	44
05	85	64	5	Piccolo	C(0)	1	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	54
06	85	64	6	Alto Flute	G(-5)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	54
07	85	64	7	Bass Flute	C(0)	-1	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	54
08	85	64	8	Soprano Recorder	C(0)	1	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	44
09	85	64	9	Alto Recorder	F(+5)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 2	44
10	85	64	10	Ocarina	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 2	54
11	85	64	11	Alto Sax	E [♯] (+3)	-1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 1	44
12	85	64	12	Tenor Sax	B [♯] (-2)	-1	Harmony	Vibrato Rate	Growl	Vibrato Depth	Off	Reverb Plate 1	44
13	85	64	13	Soprano Sax	B [♯] (-2)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 1	54
14	85	64	14	Baritone Sax	E [♯] (+3)	-2	Harmony	Vibrato Rate	Growl	Vibrato Depth	Off	Reverb Plate 1	44
15	85	64	15	Clarinet	B [♯] (-2)	-1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	54
16	85	64	16	Oboe	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	54
17	85	64	17	English Horn	F(+5)	-1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	54
18	85	64	18	Bassoon	C(0)	-2	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	44
19	85	64	19	Harmonica 1	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 2	54
20	85	64	20	Harmonica 2	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 2	54
21	85	64	21	Whistle	C(0)	1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 2	64

02: Brass

No	MSB	LSB	PC	Tone Name	Transpose	Octave	S1	S2	Thumb	Motion Tilt	Motion Roll	Effect Type	Effect Level
01	85	64	22	Trumpet	B [♯] (-2)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 1	54
02	85	64	23	Mute Trumpet	B [♯] (-2)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 1	44
03	85	64	24	Cornet	B [♯] (-2)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 1	54
04	85	64	25	Trombone	B [♯] (-2)	-1	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Plate 2	44
05	85	64	26	French Horn	F(+5)	-1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 2	44
06	85	64	27	Tuba	C(0)	-3	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	64
07	85	64	28	Brass Section	B [♯] (-2)	0	Harmony	Off	Harmony	Off	Off	Reverb Plate 1	64

03: Strings

No	MSB	LSB	PC	Tone Name	Transpose	Octave	S1	S2	Thumb	Motion Tilt	Motion Roll	Effect Type	Effect Level
01	85	64	29	Violin	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Hall 3	54
02	85	64	30	Cello	C(0)	-2	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Hall 3	54
03	85	64	31	Contrabass	C(0)	-3	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Hall 3	54
04	85	64	32	Contrabass Pizz	C(0)	-3	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 2	54
05	85	64	33	Strings	C(0)	0	Harmony	Off	Portamento	Off	Off	Reverb Plate 3	127

04: Ethnic

No	MSB	LSB	PC	Tone Name	Transpose	Octave	S1	S2	Thumb	Motion Tilt	Motion Roll	Effect Type	Effect Level
01	85	64	34	Pan Flute	C(0)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 3	64
02	85	64	35	Zampona	C(0)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 3	54
03	85	64	36	Tin Whistle	D(+2)	1	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Hall 3	54
04	85	64	37	Ryuteki	C(0)	1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	44
05	85	64	38	Shinobue	C(0)	1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	44
06	85	64	39	Shakuhachi 1	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 2	64
07	85	64	40	Shakuhachi 2	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Pitch	Reverb Hall 2	64
08	85	64	41	Bansuri	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	54
09	85	64	42	Shehnai	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	54
10	85	64	43	Pungi	C(0)	0	Drone	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Hall 3	54
11	85	64	44	Uilleann Pipes	C(0)	0	Pitch	Off	Drone	Off	Off	Reverb Plate 3	64
12	85	64	45	Bag Pipes	C(0)	0	Pitch	Off	Drone	Off	Off	Reverb Plate 3	64
13	85	64	46	Duduk 1	C(0)	-1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 4	54
14	85	64	47	Duduk 2	C(0)	-1	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Pitch	Reverb Hall 4	54
15	85	64	48	Qudi	C(0)	0	Harmony	Vibrato Rate	Growl	Vibrato Depth	Off	Reverb Hall 3	44
16	85	64	49	Bangdi	C(0)	1	Harmony	Vibrato Rate	Growl	Vibrato Depth	Off	Reverb Hall 3	44
17	85	64	50	Bawu	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	44
18	85	64	51	Xiao	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	44
19	85	64	52	Xun	C(0)	0	Harmony	Vibrato Rate	Character	Vibrato Depth	Off	Reverb Hall 3	44
20	85	64	53	Guanzi	C(0)	0	Harmony	Vibrato Rate	Growl	Vibrato Depth	Off	Reverb Hall 3	44
21	85	64	54	Suona	C(0)	0	Harmony	Vibrato Rate	Growl	Vibrato Depth	Off	Reverb Hall 3	44
22	85	64	55	Hulusi	C(0)	0	Drone	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Hall 3	44
23	85	64	56	Sheng	C(0)	0	Harmony	Vibrato Rate	Add 5th	Vibrato Depth	Off	Reverb Hall 3	44
24	85	64	57	Erhu	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Hall 3	44
25	85	64	58	Matouqin	C(0)	0	Harmony	Off	Bend Down	Off	Off	Reverb Hall 3	44

05: Synth

No	MSB	LSB	PC	Tone Name	Transpose	Octave	S1	S2	Thumb	Motion Tilt	Motion Roll	Effect Type	Effect Level
01	85	64	59	Synth Recorder	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 2	64
02	85	64	60	Lyrical SoftLead	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	64
03	85	64	61	Simple Sqr Lead	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 2	44
04	85	64	62	Simple Tri Lead	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 2	44
05	85	64	63	Tri Atk Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Plate 1	64
06	85	64	64	Sqr Fl Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Hall 3	54
07	85	64	65	Wide Syn Flute	C(0)	0	Harmony	Vibrato Rate	Flutter	Vibrato Depth	Off	Reverb Plate 3	64
08	85	64	66	Lyrical Sqr Lead	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Delay 1	64
09	85	64	67	Warm Saw Lead	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Hall 3	54
10	85	64	68	Lyrical SawLead1	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Plate 2	64
11	85	64	69	Lyrical SawLead2	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Plate 2	44
12	85	64	70	Lyrical SawLead3	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Delay 1	64
13	85	64	71	Bright Saw Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Plate 2	44
14	85	64	72	SawSqr Reso Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Delay 1	64
15	85	64	73	Dist Saw Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Plate 2	44
16	85	64	74	Voice Lead	C(0)	-1	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Delay 5	54
17	85	64	75	Porta Sqr Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Delay 3	44
18	85	64	76	Pulse Lead	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 2	44
19	85	64	77	Tri Sqr Lead	C(0)	0	Harmony	Vibrato Rate	Bend Down	Vibrato Depth	Off	Reverb Plate 1	64
20	85	64	78	Saw Tp Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Reverb Plate 2	64
21	85	64	79	Syn MtTp Lead	C(0)	0	Harmony	Vibrato Rate	Portamento	Vibrato Depth	Off	Delay 3	44

06: Other

No	MSB	LSB	PC	Tone Name	Transpose	Octave	S1	S2	Thumb	Motion Tilt	Motion Roll	Effect Type	Effect Level
01	85	64	80	La Seine	C(0)	0	Harmony	Off	Harmony	Off	Off	Reverb Hall 2	44
02	85	64	81	Musette	C(0)	0	Harmony	Off	Add +Oct	Off	Off	Reverb Hall 2	44
03	85	64	82	Jazz Organ	C(0)	0	Harmony	Off	Rotary	Off	Off	Reverb Hall 2	44
04	85	64	83	Rock Organ	C(0)	0	Harmony	Off	Add -Oct	Off	Off	Reverb Hall 2	44
05	85	64	84	Church Organ	C(0)	-1	Harmony	Off	Harmony	Off	Off	Reverb Plate 2	64
06	85	64	85	Jazz Scat 1	C(0)	-1	Harmony	Off	Bend Down	Off	Off	Reverb Hall 2	44
07	85	64	86	Jazz Scat 2	C(0)	-1	Harmony	Off	Character	Off	Off	Reverb Hall 2	44
08	85	64	87	Choir	C(0)	-1	Harmony	Off	Bend Down	Off	Off	Reverb Plate 3	107
09	85	64	88	Timpani	C(0)	-2	Off	Off	Bend Down	Off	Off	Reverb Hall 3	64
10	85	64	89	Steel Drums	C(0)	-1	Harmony	Off	Harmony	Off	Off	Reverb Hall 2	64
11	85	64	90	Vibraphone	C(0)	-1	Harmony	Off	Vibrato	Off	Off	Reverb Hall 3	54
12	85	64	91	Marimba	C(0)	-1	Harmony	Off	Harmony	Off	Off	Reverb Hall 2	54
13	85	64	92	Xylophone	C(0)	1	Harmony	Off	Harmony	Off	Off	Reverb Plate 1	44
14	85	64	93	Glockenspiel	C(0)	1	Harmony	Off	Harmony	Off	Off	Reverb Hall 4	64
15	85	64	94	Glocken Pad	C(0)	1	Harmony	Off	Vibrato	Off	Off	Reverb Plate 2	54
16	85	64	95	Drum Kit 1	C(0)	0	Drone	Off	Bend Down	Off	Off	Reverb Hall 2	64
17	85	64	96	Drum Kit 2	C(0)	0	Drone	Off	Bend Down	Off	Off	Reverb Hall 2	64
18	85	64	97	Latin Perc Set	C(0)	0	Drone	Off	Bend Down	Off	Off	Reverb Hall 2	64
19	85	64	98	SFX 1	C(0)	0	Off	Off	Drone	Off	Off	Reverb Hall 1	64
20	85	64	99	SFX 2	C(0)	0	Off	Off	Drone	Pan	Character	Reverb Hall 1	64
21	85	64	100	Didgeridoo	C(0)	0	Drone	Off	Character	Off	Off	Reverb Hall 2	64

Drum kit key assign list / ドラム・キット・キー・アサイン・リスト

	Drum Kit 1	Drum Kit 2	Latin Perc Set	SFX 1	SFX 2
C4	Kick 1	Kick & Close Hi-hat	Cowbell	Bird 1	Sea
	61 Kick 2	Close Hi-hat	Tamborine	Bird 1	Sea
	62 Snare 1	Snare & Close Hi-hat	Triangle Mute	Bird 2	Sea
	63 Snare 2	Close Hi-hat	Triangle Open	Bird 2	Sea
	64 Close Hi-hat	Close Hi-hat	Castanets	Bird 3	Sea
	Open Hi-hat	Open Hi-hat	Bongo 1	Bird 4	Sea
	65 Pedal Hi-hat	Tom 1	Bongo 2	Bird 4	Sea
	67 Tom 1	Tom 2	Maracas	Bird 5	Sea
	68 Tom 2	Tom 3	Cabasa	Bird 5	Sea
	69 Tom 3	Tom 4	Shaker	Dog	Sea
	70 Tom 4	Tom 5	Wood Block Hi	Dog	Sea
	71 Tom 5	Tom 6	Wood Block Lo	Stream	Sea
C5	Crash Cymbal	Kick & Crash Cymbal	Claves	Bubble	Wind
	73 Cowbell	Cowbell	Conga Mute	Bubble	Wind
	74 Tamborine	Tamborine	Conga Open Hi	Seashore	Wind
	75 Triangle Mute	Triangle Mute	Conga Open Lo	Seashore	Wind
	76 Triangle Open	Triangle Open	Timbale Hi	Sea	Wind
	Castanets	Castanets	Timbale Lo	Rain	Wind
	77 Bongo 1	Bongo 1	Agogo Hi	Rain	Wind
	79 Bongo 2	Bongo 2	Agogo Lo	Wind	Wind
	80 Maracas	Maracas	Jingle Bell	Wind	Wind
	81 Cabasa	Cabasa	Bell Tree	Thunder	Wind
	82 Shaker	Shaker	Whistle Short	Thunder	Wind
	83 Wood Block Hi	Wood Block Hi	Whistle Long	Horse 1	Wind
	Wood Block Lo	Wood Block Lo	Guiro 1	Horse 2	Wind
C6	85 Claves	Claves	Guiro 2	Horse 2	
	86 Conga Mute	Conga Mute	Cuica Hi	Horse 3	
	87 Conga Open Hi	Conga Open Hi	Cuica Lo	Horse 3	
	88 Conga Open Lo	Conga Open Lo	Vibra-slap	Horse 4	
	Timbale Hi	Timbale Hi		Footstep 1	
	89 Timbale Lo	Timbale Lo		Footstep 1	
	91 Agogo Hi	Agogo Hi		Footstep 2	
	92 Agogo Lo	Agogo Lo		Footstep 2	
	93 Jingle Bell	Jingle Bell		Footstep 3	
	94 Bell Tree	Bell Tree		Footstep 3	
	95 Whistle Short	Whistle Short		Footstep 4	
	Whistle Long	Whistle Long		Footstep 5	
	97 Guiro 1	Guiro 1		Footstep 5	
C7	98 Guiro 2	Guiro 2		Footstep 6	
	99 Cuica Hi	Cuica Hi		Footstep 6	
	100 Cuica Lo	Cuica Lo			
	101 Vibra-slap	Vibra-slap			
	102				