

MIDI Implementation Chart

Model: TR-1000

Version 1.11

Function	Transmitted	Recognized	Remarks
Pattern Default	10	10	Memorized
Channel Changed	1-16	1-16	
Kit Default	1	1	Memorized
Channel Changed	1-16	1-16	
Altered	*****	*****	
Note Number : True Voice	*1	*1	
Velocity Note On	o 9nH v=80	o	
Note Off	o 8nH v=00	o	
After Key's	x	x	
Touch Channel's	x	x	
Pitch Bend	x	x	
Control Change	9 o	o	EXT IN
	12 o	o	DELAY LEVEL
	13 o	o	DELAY TIME
	14 o	o	DELAY FEEDBACK
	15 o	o	MASTER FX ON
	16 o	o	MASTER FX CTRL1
	17 o	o	MASTER FX CTRL2
	18 o	o	MASTER FX CTRL3
	19 o	o	ANALOG FX ON
	20 o	o	FILTER
	21 o	o	DRIVE
	22 o	o	BD TUNE
	23 o	o	BD DECAY
	24 o	o	BD MIX
	25 o	o	BD CTRL1
	26 o	o	BD CTRL2
	27 o	o	BD CTRL3
	28 o	o	BD LEVEL
	29 o	o	SD TUNE
	30 o	o	SD DECAY
	31 o	o	SD MIX
	46 o	o	SD CTRL1
	47 o	o	SD CTRL2
	48 o	o	SD CTRL3
	49 o	o	SD LEVEL
	50 o	o	LT TUNE
	51 o	o	LT DECAY
	52 o	o	LT MIX
	53 o	o	LT CTRL1
	54 o	o	LT CTRL2
	55 o	o	LT CTRL3
	56 o	o	LT LEVEL
	57 o	o	HT TUNE
	58 o	o	HT DECAY
	59 o	o	HT MIX
	60 o	o	HT CTRL1
	61 o	o	HT CTRL2
	62 o	o	HT CTRL3
	63 o	o	HT LEVEL
80 o	o	RS TUNE	
81 o	o	RS DECAY	
82 o	o	RS CTRL	
83 o	o	RS LEVEL	
84 o	o	HC TUNE	
85 o	o	HC DECAY	
86 o	o	HC CTRL	
87 o	o	HC LEVEL	
89 o	o	MORPH	
90 o	o	REVERB TIME	
91 o	o	REVERB LEVEL	
102 o	o	CH TUNE	
103 o	o	CH DECAY	
104 o	o	CH CTRL	
105 o	o	CH LEVEL	
106 o	o	OH TUNE	
107 o	o	OH DECAY	
108 o	o	OH CTRL	
109 o	o	OH LEVEL	
110 o	o	CC TUNE	
111 o	o	CC DECAY	
112 o	o	CC CTRL	
113 o	o	CC LEVEL	
114 o	o	RC TUNE	
115 o	o	RC DECAY	
116 o	o	RC CTRL	
117 o	o	RC LEVEL	
Program Change : True Number	o 0-127	o 0-127	
System Exclusive	x	x	
: Song Position	o	o	When selected Song Mode
: Song Select	x	x	
: Tune Request	x	x	
: Clock	o	o	
: Start	o	o	
: Continue	o	o	
: Stop	o	o	
: All Sound Off	x	x	
: Reset All Controllers	x	x	
: Local On/Off	x	x	
: All Notes Off	x	x	
: Omni Mode Off	x	x	
: Omni Mode On	x	x	
: Mono Mode On	x	x	
: Poly Mode On	x	x	
: Active Sensing	x	x	
: System Reset	x	x	
*1			
INST	Note Number	Note Number (Layer A only)	Note Number (Layer B and Alt.)
BD	36	35	99
SD	38	40	104
LT	43	41	105
HT	50	48	112
RS	37	-	56
HC	39	-	54
CH	42	-	44
OH	46	-	58
CC	49	-	61
RC	51	-	63
TRG	84	-	-

*1 These note numbers are configurable on MENU>SYSTEM>MIDI>Inst Note.